ARCS PROCEDURE:		PRO(WND)-003.003
Author: W. Porch	SMET WIND SPEED CALIBRATION CHECK (CALC)	11 February 2002 Page 1 of 2

SMET Wind Speed Calibration Check (CALC)

I. Purpose:

The purpose of this procedure is to describe the steps performed by the RESET team for checking the calibration of the wind speed sensors at ARCS. **Note: this procedure is performed as part of the SMET logger calibration procedure PRO(DAQM)-005.**

II. Cautions and Hazards:

- If the wind speed sensor is brought down from the wind tower; at least two trained persons are required and take care not to be struck by the tower or weighted mount.
- Perform this procedure during each RESET team visit to the ARCS sites.
- Do not perform this procedure if lightning is observed or expected.

III. Requirements:

Drive motor with rpm display

IV. Procedure:

A. Steps:

- 1. Observe propeller motion of the anemometers on the tower.
- 2. If the motion is irregular, lower tower and replace the anemometer.
- 3. Otherwise, attach drive motor.
- 4. Compare datalogger output wind speed in Hz using the TEST MENU with three rpm settings (wind speed = 0.0049 rpm).
- 5. If speeds agree within +/-5 %, log difference and return anemometer to tower.
- 6. Otherwise, contact mentor and replace anemometer if necessary.
- 7. If replaced, repeat steps above.

V. References:

- Hart, R.: "Element Operations and Maintenance Procedure Development Outline," Argonne National Laboratory," 1995.
- 2. R. M. Young Company: "Wind System Calibration," 1994.

ARCS PROCEDURE:		PRO(WND)-003.003
Author: W. Porch	SMET WIND SPEED CALIBRATION CHECK (CALC)	11 February 2002 Page 2 of 2

VI. Attachments:

None.